


TRIKON Precast Concrete Products

601 Patterson Street West
Cranbrook, BC
P.O. Box 491
Phone: (250) 426-8162
Fax: (250) 489-4013
Email: info@trikonprecast.com

Starcon Lifting Clutch Instructions:

****Please Note:**

A Spreader Bar MUST be used at all times when lifting precast concrete products.

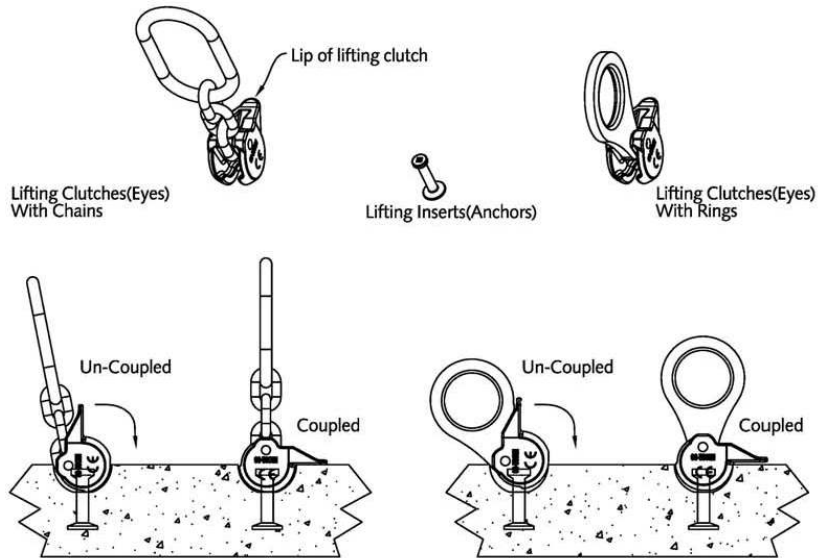

Operating Instructions:

1. Clutches are inserted into round insert depression with clutch lip perpendicular to insert.
2. Lifting clutches are coupled with insert by turning lip down against concrete product.
3. When performing lift clutch lip must be facing direction of lift.
4. Round insert depression allows clutch to turn, direction of lip must face direction of lift.
5. Lifting clutches are de-coupled from inserts by turning back clutch from concrete product.
6. Clutches are credited upon return to sales offices in good condition.

Notes:

1. Lifting Clutches(Eyes) supplied with either lifting chain or ring type connections.
2. Lifting inserts rated to either 3-5tons or 6-10ton.
3. Clutches are tested to 2 x SWL.